

Grundfos Type VLC Cross Section

| Pos. | Description |
|------|-----------------|
| 1A | Volute |
| 2K | Backplate |
| 3A* | Impeller |
| 4A* | Case wear ring |
| 4F | Balance ring |
| 5A* | Shaft sleeve |
| 8A* | Impeller screw |
| 8B | Volute screw |
| 8H | Plate screw |
| 8I | CUE screw |
| 8N | Motor screw |
| 11A* | Volute gasket |
| 11F* | Bracket gasket |
| 12A* | Impeller key |
| 13G | Slinger |
| 14A* | Seal assembly |
| 16A | Pipe plug |
| 20J | Cast iron stand |
| 21A | Motor bracket |
| 34B | Impeller washer |
| 34D | Plate washer |
| 34E | CUE flat washer |
| 34F | CUE lock washer |
| 35G | Plate nut |
| 35H | CUE nut |
| 45A | Shock isolator |
| 55A | Mounting plate |
| 65A | Motor |
| 75A | CUE |

